


Installation instructions

Danish Safety lock

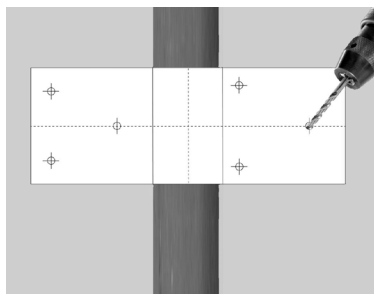

Make sure the lockingbolt is in "open position" during the installation.

- 01 Place the container on a flat surface.
- 02 Install the self-adhesive instruction horizontal above the rubberstrip in the at the desired height. See illustration.
- 03 Drill 6 pcs. of 16 mm. holes with a cupdrill.
Optional: pre-drill the holes (3 mm.) Se illustration
- 04 Remove the drill ladder and close the right door.
- 05 Install right bracket from the inside. Remember touchpad.
(Do not break the bolts before the installation is complete)
- 06 Pull right door to "closed position".
- 07 Install right bracket from the inside. Remember touchpad
Left bracket is attached with rubbering in right bracket.
(Do not break the bolts before the installation is complete)
- 08 Retrieve in total condition. Tighten all bolts.
- 09 Open the right door and remove the rubbering.
- 10 Test open and close function as well as lock function.
- 11 Tighten the bolts and then break them.

Self-adhesive illustration 1: 1

Apply the illustration to the container and follow the installation instructions above.

